

RESTATING PLASMA BALL SWITCH SETTINGS

Both switches down equal the Ball's original configuration. Sound might even work. It did on many, however don't run Sound (Power Switch all the way to the right) and Spooky together. Power Switch in the middle is the normal ON position.

RED Plug and side switch equals when in the middle is OFF, when UP Spooky channel 1 provides the signal.

BLACK Plug and side switch equals when in the middle is OFF, when UP Spooky channel 2 provides the gating signal.

Spooky Channel 1 amplitude should be between 4 & 6 volts with +100% Offset.
Spooky Channel 2 amplitude should be between 8 & 10 volts with +100% Offset.

Spooky Channel 1 Duty Cycle NO HIGHER THAN 35% else the thermal switch can be very busy.

Spooky Channel 2 Duty Cycle DOESN'T CARE, normal 50% is fine.

Play with it using the Spooky2 in manual control mode to learn the limits. These Plasma Balls are 2 or 3 times more dynamic than the old 3" ball. These Plasma Balls are also 2 or 3 times more powerful.

Schumann Resonance and other low frequencies should be gated. Meaning; run the default Master Channel, (RED Channel) in down position or pick a health frequency like 10 KHz with the Spooky (Switch in UP Position) and gate channel 2 at 7.83 hertz.